







| 1 | Blade protection plate | 37 | Axis for slide holder |
|------|--------------------------------------|----|---|
| 2 | Blade | 38 | Holder for locring plate |
| 3 | Screw for blade | 39 | locking nut for locring plate |
| 4 | Sealing ring for blade shaft | 40 | Sealing ring for locring plate |
| 5 | Sealing ring for blade spindle | 41 | Scraping board |
| 6 | Sleeve of blade | 42 | locring board for circle orbit |
| 7 | Spindle of blade | 43 | Spring for circle orbit |
| 8 | Blocking ring for bearing | 44 | Circle orbit |
| 9 | Bearing | 45 | Sliding frame |
| 10 | Isolating sleeve | 46 | Square orbit |
| 11 | Blocking ring for hole | 47 | Spherical Bearings |
| 12 | Microswitch | 48 | Axis for sliding frame |
| 13 | Bracket for microswitch | 49 | Carriage stand |
| 14 | Button for sharping stone | 50 | Carriage |
| 15 | Sharping stone | 51 | Circlip |
| 16 | Axis of sharping stone | 52 | Pole for carriage |
| 16-1 | Axis of trim stone | 53 | Bearing for pole of carriage |
| 17 | Trim stone | 54 | Handle of pressor |
| 18 | Stand of stone | 55 | Pressor |
| 18-1 | Cover | 56 | French countersunk head screw |
| 19 | Handlebar | 57 | Protection board (includes screw) |
| 20 | Stand of sharpner | 58 | Motor |
| 21 | Bbutton for trim stone | 59 | bracket for motor |
| 22 | Blade protection ring(include screw) | 60 | Hinge axis |
| 23 | locring plate | 61 | Belt |
| 24 | Wire and plug | 62 | U type handle |
| 25 | Pole | 63 | Aluminum handle (only for 250L, 275L, 300L) |
| 26 | Body | 64 | Round handle |
| 27 | Feet | | |
| 28 | Switch | | |
| 29 | Capacitor | | |
| 30 | Bottom | | |
| 31 | Adjusting handlebar | | |
| 32 | Digital ring plate | | |
| 33 | Ddigital ring | | |
| 34 | Cam | | |
| 35 | Slide holder | | |
| 36 | Slide axis | | |